




1. Using a chalkline, mark a 2 inch wide slot on the wooden soffit. Position the slot closer to the fascia than the house.

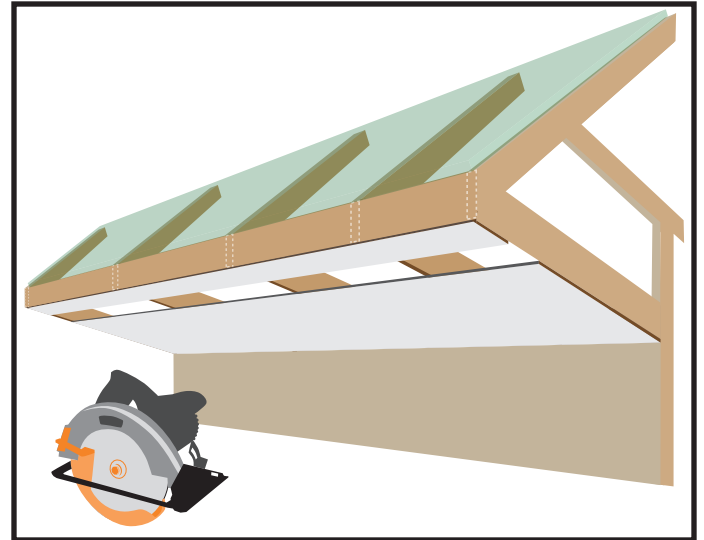

2. Set the depth of a circular saw so that it cuts the plywood but doesn't damage the joists. Cut and remove the 2 inch slot.

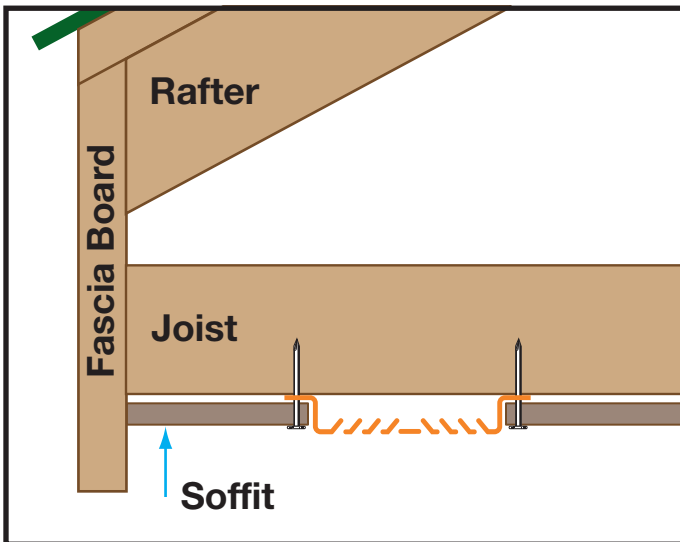

3. The plywood should be loose enough to slip the flange of the eave vent between the plywood and the joists.

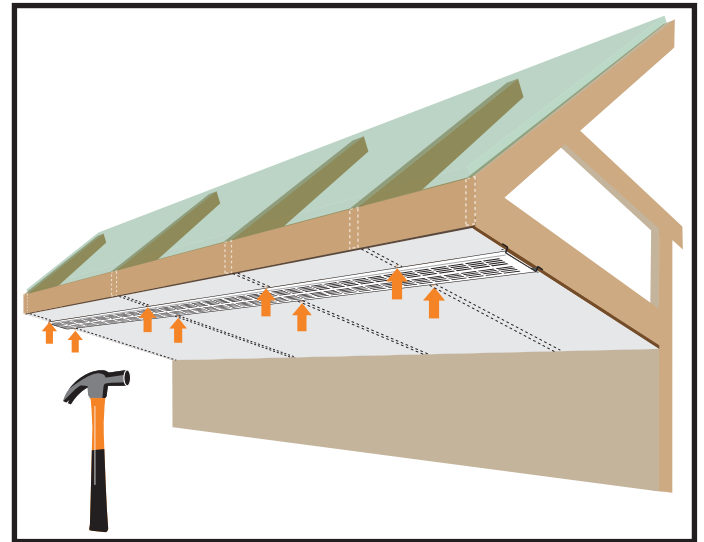

4. Affix the vent by nailing or screwing through the wooden soffit, the vent flange and into the joists. Make sure the attic insulation doesn't cover the vent or restrict airflow.



CAUTION! Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools, gloves and eye protection are absolutely required.